



## Component Location Index

<b>(Refer to Section 201 for photographs.)</b>	
<b>(Refer to Section 202 for selected connector views.)</b>	
<b>(Refer to Section 203 for harness routing views.)</b>	
<b>Automatic Transmission Control Unit</b> . . . . .	<b>65</b>
On right front of floor, below carpet	
<b>Brake Light Switch</b> . . . . .	<b>44</b>
Below left side of dash, on brake pedal support	
<b>Coolant Temperature Sensor (TW)</b> . . . . .	<b>28</b>
Right side of engine, below distributor assembly	
<b>Countershaft Speed Pulser</b> . . . . .	<b>34</b>
Right rear of engine compartment, on transmission	
<b>Dash Fuse Box</b> . . . . .	<b>36</b>
On left kick panel	
<b>Distributor Assembly</b> . . . . .	<b>27</b>
Right side of engine	
<b>Lock-Up Control Solenoid Valves</b> . . . . .	<b>31</b>
Right front of engine compartment, on transmission	
<b>Mainshaft Speed Pulser</b> . . . . .	<b>23</b>
Right front of engine compartment, on transmission	
<b>PGM-FI Electronic Control Unit</b> . . . . .	<b>64</b>
On right front floor, below carpet	
<b>Service Check Connector C444 (2-BLU)</b> . . .	<b>61</b>
Below right side of dash, at kick panel	
<b>Shift Control Solenoid Valves</b> . . . . .	<b>30</b>
Lower right front of engine compartment, on transmission	
<b>Shift Lever Position Console Switch</b> . . . . .	<b>52</b>
Under left side of console, at base of gear selector	
<b>Throttle Angle Sensor</b> . . . . .	<b>15</b>
Top center of engine, rear of throttle body assembly	
<b>Under-hood Fuse Box</b> . . . . .	<b>17</b>
Right rear corner of engine compartment, behind strut tower	
<b>Vehicle Speed Sensor</b> . . . . .	<b>19</b>
Right rear of transmission	
<b>C106 (3-GRY) (Automatic)</b> . . . . .	<b>31</b>
Right front of engine, below coolant outlet	
<b>C107 (2-GRY) (Automatic)</b> . . . . .	<b>31</b>
Right front of engine, below coolant outlet	
<b>C108 (2-GRN)</b> . . . . .	<b>31</b>
Right front of engine, below distributor assembly	
<b>C112 (2-GRY)</b> . . . . .	<b>20</b>
Right rear of engine compartment, above transmission	
<b>C113 (3-GRY)</b> . . . . .	<b>19</b>
Right rear of engine compartment, above transmission	
<b>C116 (2-GRY)</b> . . . . .	<b>25</b>
Right rear of engine, behind distributor assembly	
<b>C127 (6-GRY) (Automatic)</b> . . . . .	<b>12</b>
Left side of engine compartment, forward of strut tower	
<b>C209 (14-GRY)</b> . . . . .	<b>21</b>
Right side of engine compartment, left of strut tower	
<b>C210 (14-GRY) (Automatic)</b> . . . . .	<b>21</b>
Right side of engine compartment, left of strut tower	
<b>C214 (8-GRY)</b> . . . . .	<b>165</b>
On bottom of under-hood fuse box	
<b>C217 (16-GRY)</b> . . . . .	<b>165</b>
On bottom of under-hood fuse box	
<b>C311 (14-GRY)</b> . . . . .	<b>12</b>
Left side of engine compartment, forward of strut tower	
<b>C404 (10-BRN)</b> . . . . .	<b>167</b>
On rear of dash fuse box	
<b>C407 (16-GRY)</b> . . . . .	<b>167</b>
On rear of dash fuse box	
<b>C408 (18-BLU)</b> . . . . .	<b>167</b>
On rear of dash fuse box	
<b>C426 (18-BLU)</b> . . . . .	<b>55</b>
Under front of console	