



General Troubleshooting Information


How to Use the Self-diagnostic Function

The HVAC control unit has a self-diagnostic function for the heating, ventilation, and air conditioning system. To run the self-diagnostic function, do the following:


1. Turn the ignition switch to LOCK (0), and then to ON (II).
2. Set the FAN CONTROL dial to OFF, the TEMPERATURE CONTROL dial on Max Cool, and select the VENT mode.
3. Turn the ignition switch to LOCK (0), and then to ON (II).
4. Press and hold the RECIRCULATION CONTROL button, then within 10 seconds press and release the REAR WINDOW DEFOGGER/MIRROR DEFOGGER button five times. Release the RECIRCULATION CONTROL button; the recirculation indicator blinks two times, then the self-diagnostic begins.

NOTE:

- The blower motor will run at various speeds when in the self-diagnostic mode.
- Once the self-diagnostic function is finished, the recirculation indicator blinks, and the number of blinks indicates the Diagnostic Trouble Code (DTC) number. If there are multiple DTCs, the indicator blinks each DTC in sequence from the lowest DTC number to the highest.
- The indicator pauses 3 seconds, then repeats the DTC blink sequence.
- If no DTCs are found, the indicator does not blink.

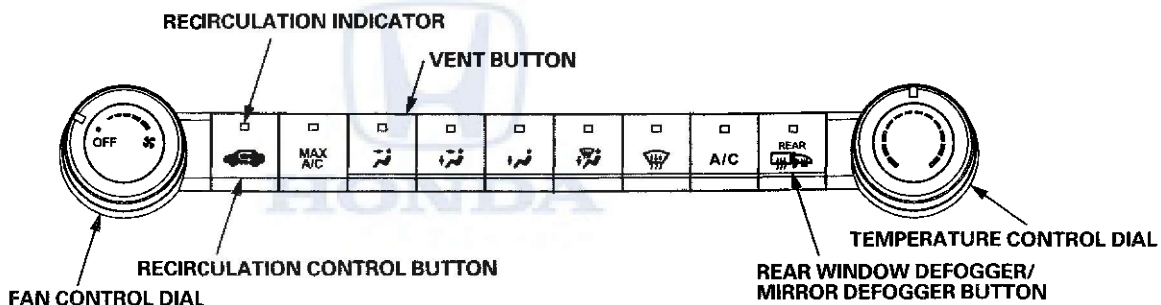

Example of DTC Indication Pattern (DTC 3)

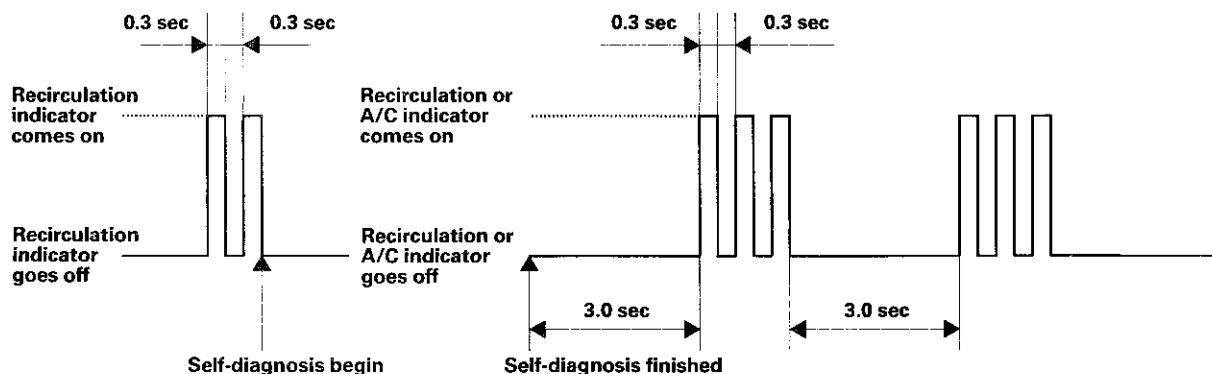

(cont'd)