

# Timing Belt and Timing Balancer Belt

## Illustrated Index

**NOTE:**

- Refer to page 6-21 for positioning crankshaft and pulley before installing the belt.
- Mark the direction of rotation on the belt before removing.
- Do not use the upper cover and lower cover for storing items disassembled.
- Clean the upper cover and lower cover before installing.
- Replace the camshaft seals and crankshaft seals if there is oil leakage.
- Refer to page 6-15 before installing timing belt and timing balancer belt.

