


Component Locations


Index

LHD:

SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-18

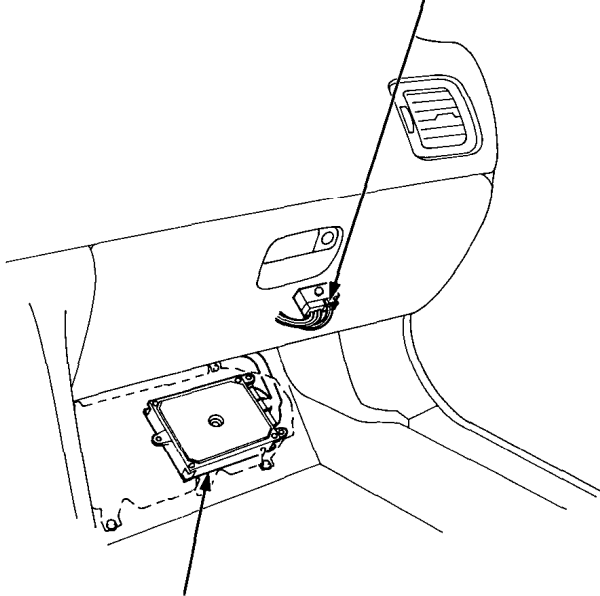


ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-18
Troubleshooting, page 11-26

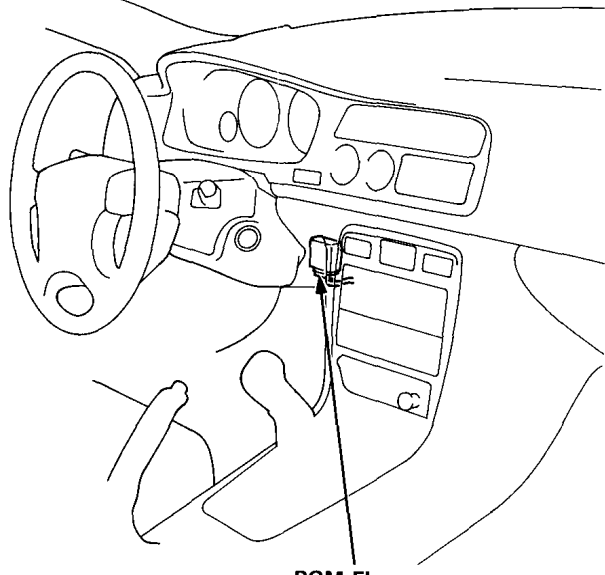


**PGM-FI
MAIN RELAY**
Relay Testing, page 11-95
Troubleshooting, page 11-96

RHD:

SERVICE CHECK CONNECTOR (2P)
Self-diagnostic Procedures, page 11-18

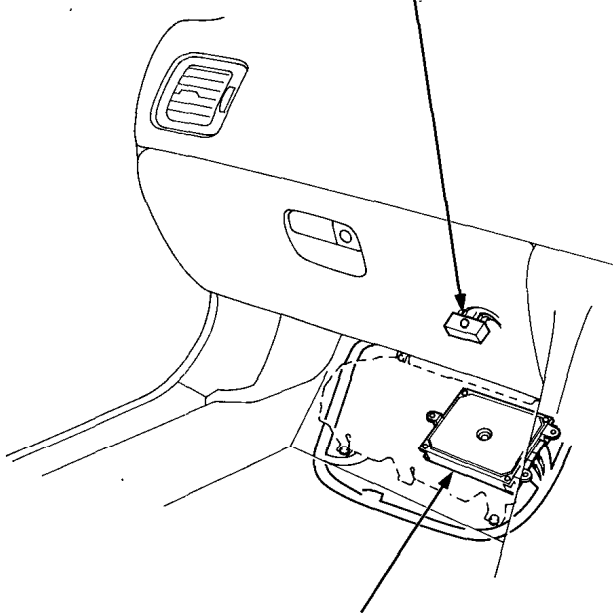

ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-18
Troubleshooting, page 11-26

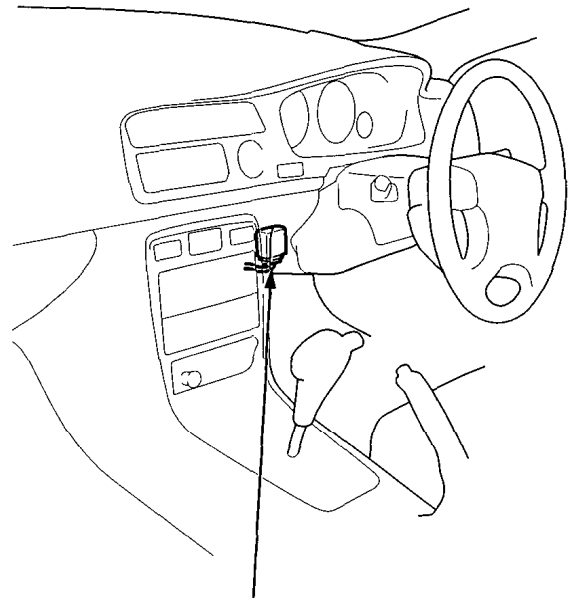

**PGM-FI
MAIN RELAY**
Relay Testing, page 11-95
Troubleshooting, page 11-96