

Fuse/Relay Boxes

Connector to Fuse/Relay Box Index (cont'd)

Driver's Under-dash Fuse/Relay Box

Socket	Ref	Terminal	Connects to
A	11	10	Left side wire harness (see page 22-24)
B	3	14	Left side wire harness (see page 22-24)
C	10	5	Left engine compartment wire harness (see page 22-18)
D	7	—	Not used
Diode	1	—	
Diode	2	—	
E	4	20	Left engine compartment wire harness (see page 22-18)
F	9	6	Driver's door wire harness (see page 22-32)
G	8	18	Driver's door wire harness (see page 22-32)
H	5	6	Not used
I	13	18	Dashboard wire harness A (see page 22-22)
J	12	2	Service check connector
K	14	18	Dashboard wire harness A (see page 22-22)
L	23	—	Not used
M	15	6	Ignition switch lead (see page 22-38)
Multiplex control unit connector A	6	24	(Plugs directly into the fuse box)
N	22	2	SRS main harness (see page 22-39)
O	21	20	Dashboard wire harness B (see page 22-20)
P	16	7	Dashboard wire harness B (see page 22-20)
Q	17	22	Dashboard wire harness B (see page 22-20)
R	26	1	Optional connector
Reverse relay	19	4	
S	27	1	Optional connector
Starter cut relay	18	4	
T	24	1	Optional connector
Turn signal/hazard relay	20	4	
U	25	1	Optional connector

