

2007 Honda Accord

2003-07 TRANSMISSION Automatic Transmission - Accord (V6)

		<p align="right">range switch (see <u>TRANSMISSION RANGE SWITCH TEST</u>).</p>
<p>Shift lever cannot be moved from P while you are pressing on the brake pedal</p>	<ul style="list-style-type: none"> • Accelerator pedal position sensor circuit • Accelerator pedal position sensor defective • Brake pedal position switch circuit • Brake pedal position switch defective • Shift lock solenoid defective • Shift lock solenoid control circuit <ul style="list-style-type: none"> • Shift lock mechanism defective • Throttle body defective • Transmission range switch ATP P switch stuck OFF • Transmission range switch ATP P switch line opened 	<ul style="list-style-type: none"> • Inspect the APP sensor signal (see <u>APP SENSOR INSPECTION</u>). • Check the interlock system - shift lock system circuit, refer to <u>SHIFT LOCK SYSTEM CIRCUIT TROUBLESHOOTING</u>. • Test the shift lock solenoid (see <u>SHIFT LOCK SOLENOID TEST</u>). • Inspect the transmission range switch (see <u>TRANSMISSION RANGE SWITCH TEST</u>).
<p>Ignition switch cannot be moved</p>		<p>Check the interlock system - key interlock system circuit,</p>