



Throttle Body Removal/Installation

NOTE:

- Do not adjust the throttle stop screw.
- After reassembly, adjust the cruise control cable (see page 4-54) and the throttle cable (see page 11-134).
- The TP sensor is not removable.

