

## INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

### Accessing the Information Display



When you start the engine, the information display shows your last active selection from the previous drive cycle.

*Automatic transmission shown*



To toggle between the different displays, press and release the select/reset knob repeatedly.

## Information Displays



Instant fuel economy, Odometer, Trip meter A, Outside temperature



Oil life



Instant fuel economy, Range, Trip meter A, Outside temperature



Instant fuel economy, Average fuel economy B, Trip meter B, Outside temperature



Instant fuel economy, Average fuel economy A, Trip meter A, Outside temperature