

# Fuse/Relay Boxes

## Connector to Fuse/Relay Box Index (cont'd)

### Under-dash Fuse/Relay Box

Socket	Ref	Terminal	Connects to
A	6	6	Dashboard wire harness (see page 22-28)
Accessory power socket relay	19	4	
A/F sensor relay	20	4	
B	12	6	Engine compartment wire harness (see page 22-26)
C	11	12	Engine compartment wire harness (see page 22-26)
D	13	17	Engine compartment wire harness (see page 22-26)
E	8	16	Floor wire harness • 4-door (see page 22-36) • 2-door (see page 22-40)
F	9	14	Floor wire harness • 4-door (see page 22-36) • 2-door (see page 22-40)
G	14	6	Not used
H	15	14	Floor wire harness • 4-door (see page 22-36) • 2-door (see page 22-40)
I	10	5	Roof wire harness (see page 22-52)
Ignition coil relay	23	4	
J	27	21	Driver's door subharness (see page 22-54)
K	26	12	Driver's door subharness (see page 22-54)
M	25	3	MICS (MPCS) service check connector
N	2	45	Dashboard wire harness (see page 22-28)
P	17	30	Dashboard wire harness (see page 22-28)
PGM-FI main relay 1	21	4	
PGM-FI main relay 2	24	4	
Power window relay	22	4	
Q	16	14	Dashboard wire harness (see page 22-28)
R	3	2	Dashboard wire harness (see page 22-28)
S	5	2	Dashboard wire harness (see page 22-28)
Starter cut relay	18	4	
T	7	6	Optional connector
Turn signal/hazard relay	4	6	
X	1	39	Dashboard wire harness (see page 22-28)

