

# Connectors and Harnesses

## Connector to Harness Index (cont'd)

### Right Engine Compartment Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
ABS control unit connector A	1	12	Behind right kick panel		* 1
ABS control unit connector B	2	22	Behind right kick panel		* 1
ABS fail-safe relay	6	4	Right side of engine compartment		* 1
ABS modulator unit	22	10	Right side of engine compartment		* 1
ABS pump motor	23	2	Right side of engine compartment		
ABS pump motor relay	5	4	Right side of engine compartment		
ABS right front wheel sensor	20	2	Right side of engine compartment		
ABS/TCS control unit connector A	45	26	Behind right kick panel		* 2
ABS/TCS control unit connector B	1	16	Behind right kick panel		* 2
ABS/TCS control unit connector C	2	12	Behind right kick panel		* 2
ABS/TCS modulator unit	22	23	Right side of engine compartment		* 2
A/C compressor clutch	31	1	Right side of engine compartment		
A/C pressure switch	25	2	Behind condenser fan motor		
Condenser fan motor	30	2	Middle of engine compartment		
Cruise control actuator	21	4	Right side of engine compartment		
Diode (Lighting)	40	2	Behind right kick panel		Canada
ELD unit	12	3	Inside under-hood fuse/relay box		
High beam cut relay	42	4	Behind right kick panel		Canada
Left horn	26	1	Behind middle of front bumper		
Outside air temperature sensor	28	2	Behind middle of front bumper		
Passenger's under-dash fuse/relay box connector D (see page 22-25)	4	3	Behind right kick panel		
Passenger's under-dash fuse/relay box connector C (see page 22-25)	3	18	Behind right kick panel		
Power steering pressure (PSP) switch	19	2	Middle of engine compartment		
Radiator fan motor	24	2	Middle of engine compartment		
Right front parking light	33	2	Behind right headlight		
Right front side marker light	39	3	Behind right of front bumper		
Right headlight (High beam)	32	2	Behind right headlight		
Right headlight (Low beam)	34	2	Behind right headlight		
Right horn	29	1	Behind middle of front bumper		
Seat heater relay	7	4	Right side of engine compartment		* 1
Secondary heated oxygen sensor (Secondary HO2S)	18	4	Right side of engine compartment		
Security hood switch	27	2	Behind middle of front bumper		
Taillight relay	41	4	Behind right kick panel		
TCS relay	7	4	Right side of engine compartment		* 2
Under-hood fuse/relay box connector D (see page 22-23)	8	16	Right side of engine compartment		
Under-hood fuse/relay box connector C (see page 22-23)	9	3	Right side of engine compartment		
Under-hood fuse/relay box connector B (see page 22-23)	10	7	Right side of engine compartment		
Under-hood fuse/relay box connector A (see page 22-23)	11	18	Right side of engine compartment		
Washer level switch	38	2	Behind right of front bumper		Canada
Windshield washer motor	37	2	Behind right of front bumper		
C201	13	16	Under right side of dash	Dashboard wire harness B (see page 22-16)	
C202	14	7	Under right side of dash	Dashboard wire harness B (see page 22-16)	
C203	15	5	Under right side of dash	Dashboard wire harness B (see page 22-16)	
C204	16	22	Under right side of dash	Dashboard wire harness A (see page 22-18)	
G201	35		Right side of engine compartment	Body ground Via right engine compartment wire harness	
G202	17		Right side of engine compartment	Body ground Via right engine compartment wire harness	
G203	36		Right side of engine compartment	Body ground Via right engine compartment wire harness	
G204	43		Behind right kick panel	Body ground Via right engine compartment wire harness	
G205	44		Behind right kick panel	Body ground Via right engine compartment wire harness	

\* 1: '98-00 models

\* 2: '01-02 models

