

Heating


General Troubleshooting Information

How to Retrieve a DTC


The heater control panel has a self-diagnosis function.

Running the Self-diagnosis Function

1. Turn the ignition switch ON (II).
2. Turn the fan switch OFF, and the recirculation control switch to Recirculate (recirculation indicator comes on).
3. Press and hold the recirculation control switch to Fresh (recirculation indicator goes off). Continue to hold the switch until the recirculation indicator comes on for 2 seconds, then it will blink the Diagnostic Trouble Code (DTC) to indicate a faulty component.

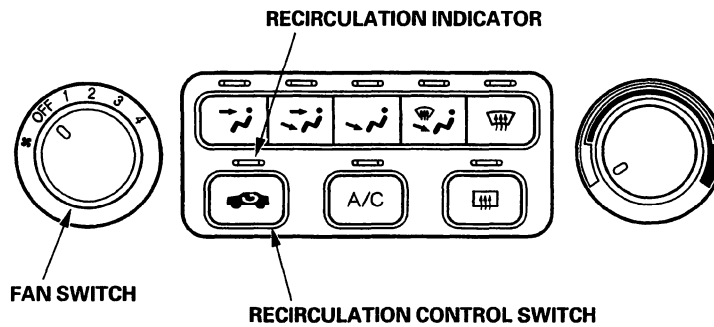

Example of DTC Indication Pattern (DTC 2):

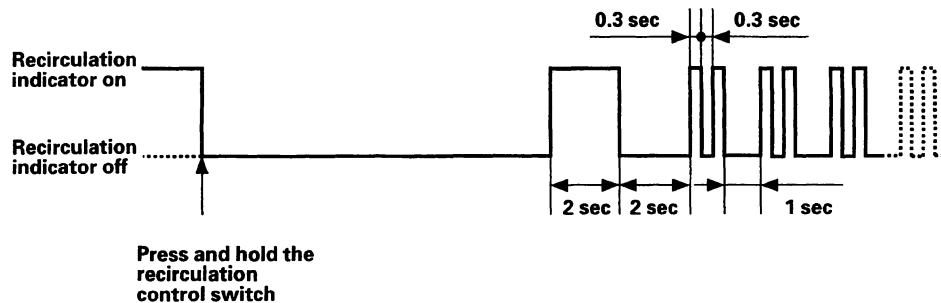

Resetting the Self-diagnosis Function

Turn the ignition switch OFF to cancel the self-diagnosis function. After completing repair work, run the self-diagnosis function again to make sure that there are no other malfunctions.



DTC Troubleshooting Index

DTC (Recirculation Indicator Blinks)	Detection Item	Page
1	A problem in the air mix control motor circuit	(see page 21-9)
2	A problem in the mode control motor circuit	(see page 21-10)
3 (With A/C)	A problem in the evaporator temperature sensor circuit	(see page 21-12)

In case of multiple problems, the recirculation indicator will indicate only the DTC with the least number of blinks.