


Siri® Eyes Free Mode

In a continuing effort to bring you the latest and most innovative technology, Honda has integrated Siri Eyes Free Mode into your vehicle. This feature is available for installation at your Honda dealer. Applicable models include 2013 Accord (all), 2014 Accord Sedan EX-L and above, and 2014 Accord Coupe EX and above.

Siri Eyes Free Mode allows a more personalized integration experience between your Siri-equipped iPhone and your vehicle's *Bluetooth*® HandsFreeLink® system. In addition to using familiar in-vehicle voice commands, you can also say Siri-related commands. Use Siri as you normally would with your iPhone, for features such as:

- Sending and reading aloud text messages, and sending e-mails
- Setting up calendar entries, reminders, and alarms
- Checking the weather
- Posting to social media sites
- Finding nearby restaurants or points of interest (POIs)
- Turn-by-turn iPhone directions (when the audio system is set to *Bluetooth*® Audio or iPod mode)
- Receiving sports scores and stock quotes

Before you can use Siri in your vehicle, you must pair your Siri-equipped iPhone when the vehicle is stopped. See your vehicle's Owner's Manual for pairing instructions and tips on using voice recognition.

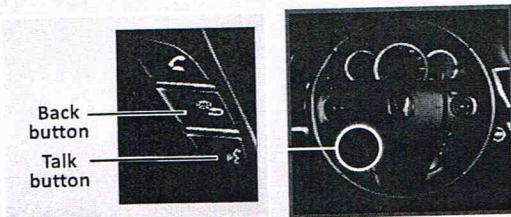

To activate Siri

Press and hold the Talk button until you hear the Siri tone (after the initial tone). Say your Siri command. If you only press and release the Talk button, the vehicle voice recognition system is activated.

To cancel a command

Press the Back button.

Here are some examples of Siri commands you can use.*

Any requests that include visual feedback from Siri on your phone are not displayed on the vehicle screen.

To hear turn-by-turn directions or songs through your vehicle, your audio system must be set to *Bluetooth*® Audio or iPod mode.

- “Call John Smith”
- “Read my new text message”
- “Send an e-mail to Mary”
- “Find a nearby sushi restaurant”
- “Get directions to John’s house”
- “Remind me to pick up a birthday gift”
- “Set up a meeting for today at 3 p.m.”
- “What is the stock price for Honda?”
- “What is the weather in Los Angeles?”
- “Wake me up at 6 a.m. tomorrow”
- “Post a status to Twitter (or Facebook)”
- “Play song (song title)”

*Certain commands rely on your phone's features and existing apps.

For more information or help, contact Honda Customer Service at (800) 999-1009, select option 3, and ask to be transferred to technical support.


Installation costs may vary. Check with your dealer for final pricing.

We recommend placing your phone in a safe location (e.g., center console storage) and only using Siri Eyes Free Mode and voice feedback to access the Siri features.

Always remain attentive when driving. Certain functions are disabled or inoperable while the vehicle is in motion. Only operate the system when conditions permit you to safely do so. Avoid focusing on the device display or manually operating the system controls while driving. State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

iPhone and Siri are trademarks of Apple, Inc.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by American Honda Motor Co., Inc., is under license. Other trademarks and trade names are those of their respective owners.

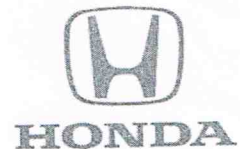



INSTALLATION INSTRUCTIONS

Accessory
SIRI EYES FREE MODE
HFL SOFTWARE

Application
See APPLICATION CHART

Publications No.
All 50044
Issue Date
NOV 2013

NOTE: Before installing this accessory software, make sure the customer has reviewed the system limitations on the Siri Eyes Free Mode customer information sheet on the last page of these instructions.

American Honda has provided a Siri Eyes Free software update. This update allows users with a Siri-equipped iPhone to use Siri through the HandsFreeLink system.

Application Chart

2013 Accord – ALL

2014 Accord 2-Door EX, EX-L with Touch Screen Audio/Navigation – ALL

2014 Accord 4-Door EX-L with Touch Screen Audio/Navigation – ALL

SOFTWARE INFORMATION

HDS Software (PC)

HDS Software Version: 3.011.008

HFL Application Version 2.1.0.0

NOTE: To avoid an incorrect repair that would not be covered under warranty, use the software version listed above or a later version.

REQUIRED TOOLS AND EQUIPMENT

- A laptop PC, loaded with the newest version of the HDS software, and equipped with the minimum requirements:
 - Any version of Windows listed below:
 - Windows XP (32-bit), at least 512 MB RAM, and Service Pack 2
 - Windows Vista/7 (32-bit), at least 1 GB RAM
 - Windows 7, (64-bit), at least 2 GB RAM
 - 1 gigahertz (GHz) or faster 32-bit (x86) or 64-bit (x64) processor
 - At least 16 GB of available hard disk space (32-bit) or at least 20 GB hard disk space (64-bit; Windows 7 only)
 - *Windows Vista Only:* Support for DirectX 9 graphics with WDDM and at least 128 MB of graphics memory (32 MB for Home Basic)
 - *Windows 7 Only:* DirectX 9 Graphics device with WDDM 1.0 or higher driver
 - The Microsoft.NET Framework software application: Version 2.0 or later

NOTE: This is available to download for free; go to microsoft.com or ask your system administrator for assistance.

- The latest version of the HDS software installed on this computer. See the specific service bulletin you're applying for additional information.
- A recognized Bluetooth radio device installed on this computer. If one is required, order P/N: CDWF8T016 from the Tool and Equipment Program (on iN, click on: **Service > Quick Links > Tool and Equipment Program**), or choose a commercially available device from the list below.

Brand	Model#	OS*	32-bit	64-bit
Targus ¹	ACB10US1	ALL	X	X
Cirago ²	BTA-3210	ALL	X	X
IO Gear ¹	GBU421	ALL	X	X
Rocketfish ¹	RF-MRBTAD	ALL	X	X

* Windows XP, Windows Vista, or Windows 7 Operating System

¹ Use Widcomm (Broadcom) Bluetooth drivers.

² Use Toshiba Bluetooth drivers.

SOFTWARE UPDATE PROCEDURE

2013 Vehicles with Audio Hard Key System

NOTE: Failure to follow the procedures and precautions may damage the HFL control unit.

1. Connect a battery charger to the vehicle and leave it connected during the entire procedure to maintain a steady voltage.
2. Turn the ignition switch to ON (II).