


Ignition Switch

Replacement

SRS components are located in this area. Review the SRS components locations, precautions, and procedures in the SRS section before performing repairs of service (see page 23-28).

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the radio's preset buttons.
2. Disconnect the battery negative cable.
3. Remove the steering column covers (see page 17-25).
4. Insert the ignition key, and turn it to "0".
5. Remove the 3 screws (A), and replace the electrical switch (B).

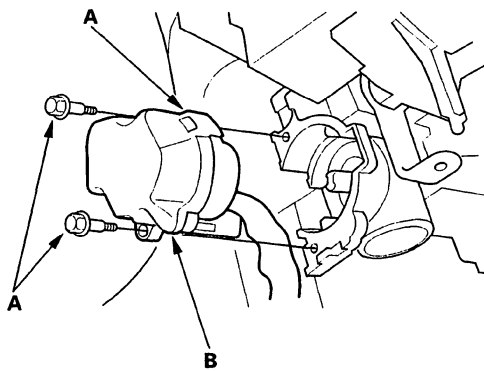

6. Install the switch in the reverse order of removal.
7. After reconnecting the battery, enter the anti-theft code for the radio, then enter the customer's radio station presets.