




Ignition Switch

Test

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS section before performing repairs or service (see page 23-28).

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the radio's preset buttons.
2. Disconnect the battery negative cable.
3. Remove the dashboard lower cover (see page 20-84).
4. Disconnect the 6P connector from the driver's under-dash fuse/relay box.

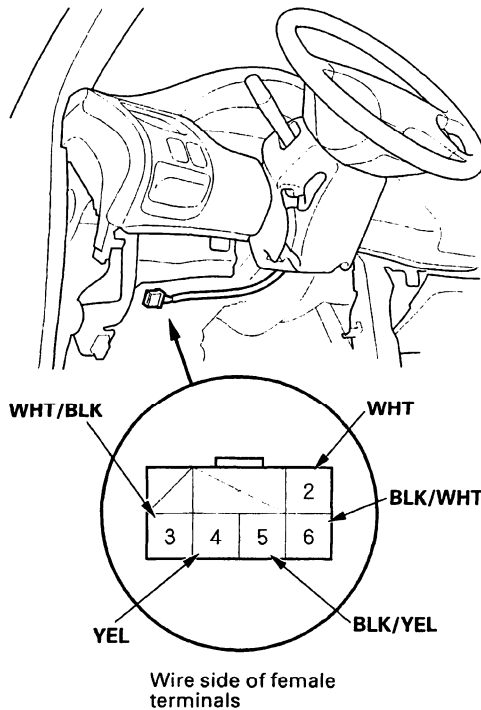

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	3 WHT/ BLK (ACC)	2 WHT (BAT)	5 BLK/ YEL (IG1)	4 YEL (IG2)	6 BLK/ WHT (ST)
O (LOCK)					
I (ACC)	○	○			
II (ON)	○	○	○	○	
III (START)		○	○		○

6. If the continuity checks do not agree with the table, replace the electrical switch.
7. After reconnecting the battery, enter the anti-theft code for the radio, then enter the customer's radio station presets.